


SE350 V2 system configurations and diagrams


Block diagram, mounting options, drive bay configuration, and parts installation

Lenovo


Block diagram

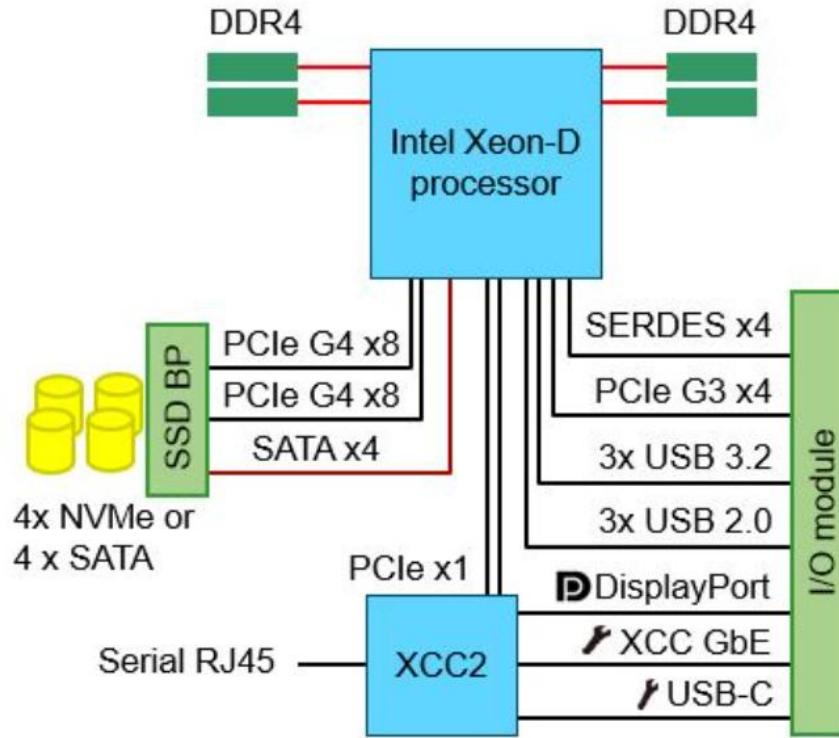

System board block diagram

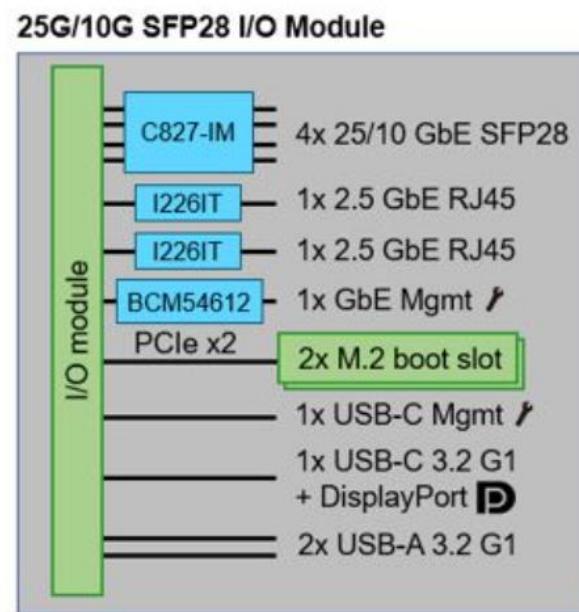

I/O module block diagram

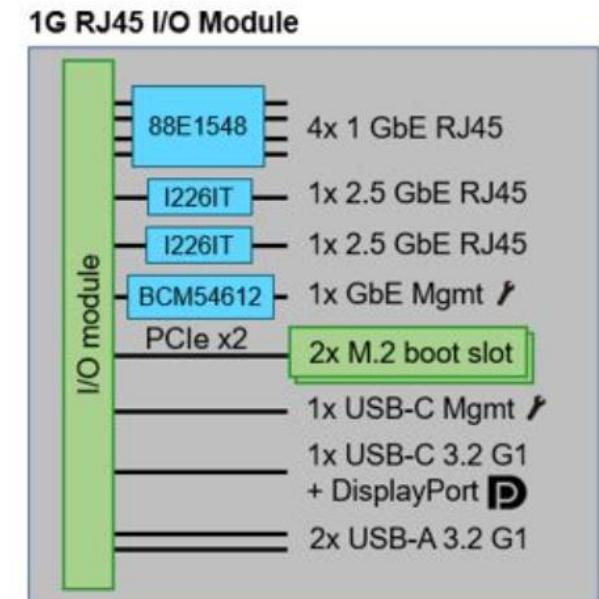

Mounting options

The SE350 V2 has the following mounting options:


- Desktop
- Standard Rack (1U2N / 2U2N)



Mounting options – rack mount 1U

The E1 enclosure is a standard-depth 1U enclosure


- 1U height, side by side nodes
- Power adapter tray behind node enclosure
- For mounting options and procedures, refer to the SE350 V2 user guide on [Lenovo Docs](#).

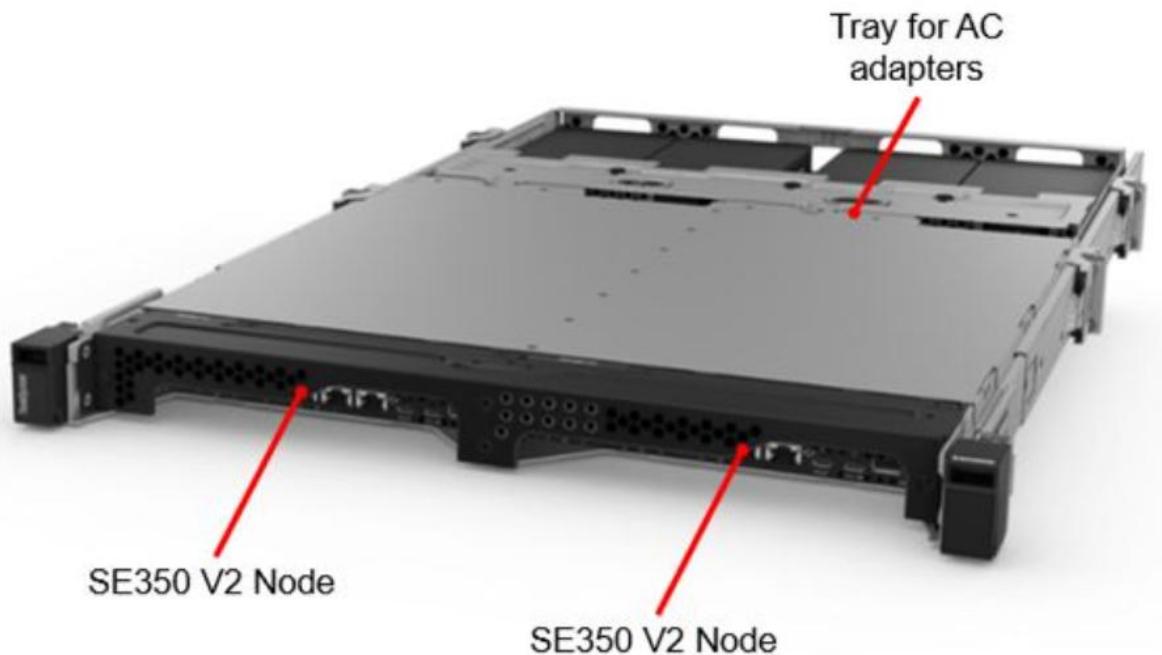


Front drive bay configurations

The SE350 V2 front drive bay supports the following configurations:

- Four 7 mm hot-swap drive bays
SATA or NVMe

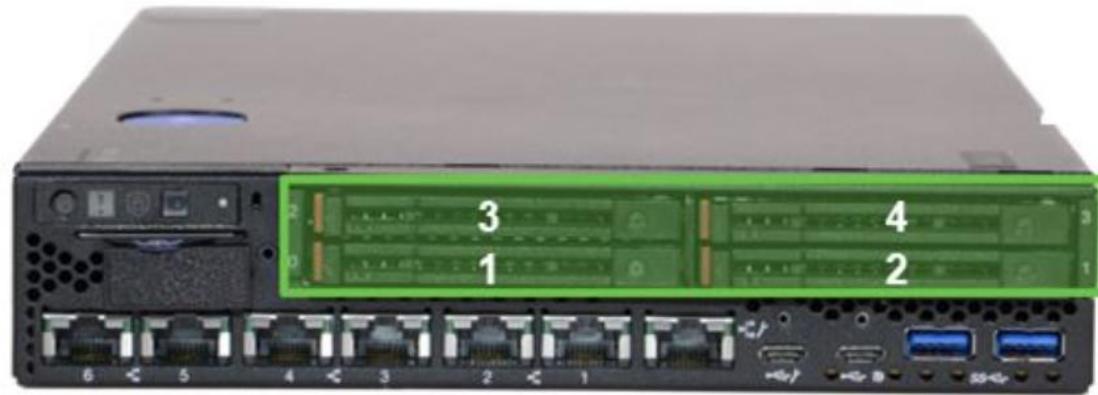

- Two 15 mm hot-swap drive bays
SATA or NVMe

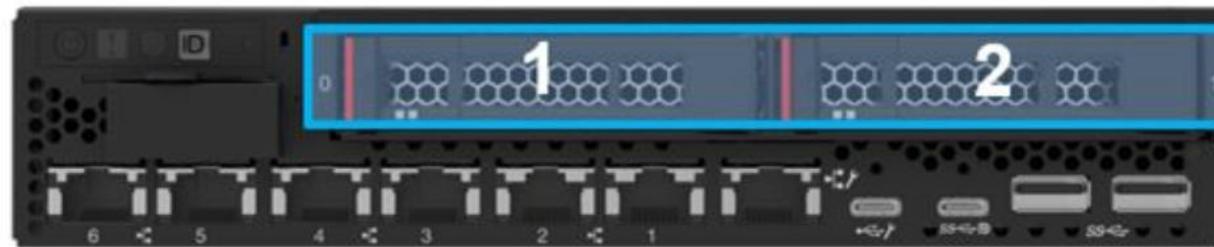

Parts installation and removal

- Refer to the parts removal and installation videos on the course landing page
- Refer to the SE350 V2 user guide on [Lenovo Docs](#) for detailed installation steps, including:
 - Installation guidelines
 - Memory module installation rules and order
 - Power on and power off the server
 - Configuration guide
 - Dust filter replacement
 - Power adapter replacement
 - Node component replacement
 - Complete parts replacement
 - Mounting options